


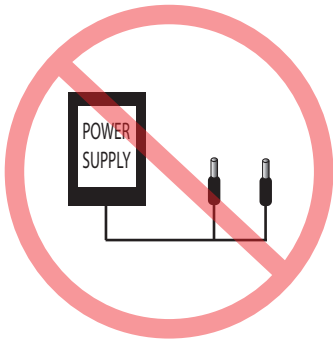
# GERMANIUM DRIVE

**\*IMPORTANT - READ BEFORE USING\***

The Germanium Drive pedal runs on any two **separate** 9 VOLT "BOSS" style power supplies or two 9 VOLT batteries.


Only use power supplies with the following polarity symbol. 

**Do Not** "DAISY-CHAIN" two plugs from one supply.







# BATTERY REPLACEMENT

To open any Chandler Limited pedal, remove the four black screws on the sides. **DO NOT** remove screws from the top of pedal.

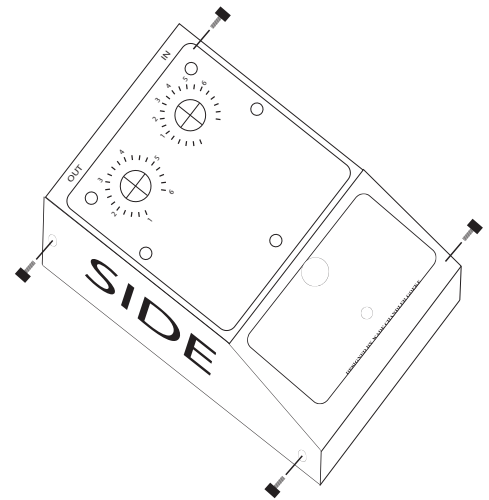



**BATTERIES NOT INCLUDED**

# RECALL

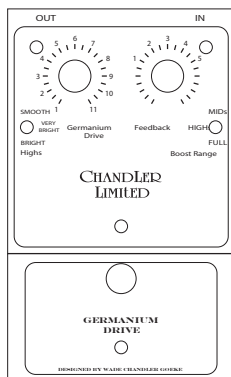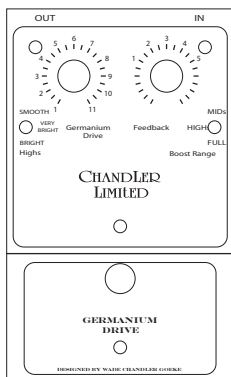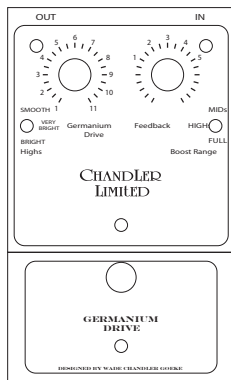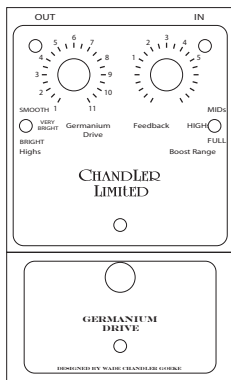

# SUGGESTED SETTINGS

**AGGRESSIVE**      **IN YOUR FACE**

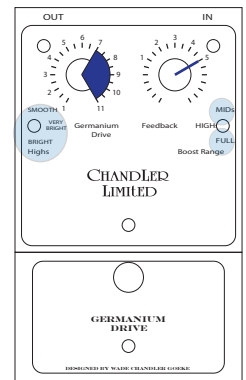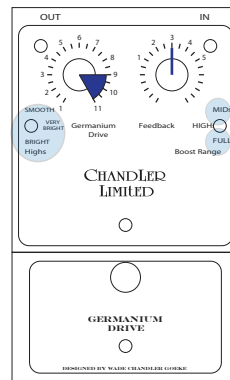

**FUZZ**

**COLOR**

